

INITIAL SETTING UP

First select the three angular steel claws. Select the holes which give the best fit on the tyre width. Secure with button head screws. When initially trying the clamp around the tyre take care to select which tapped hole gives the tightest fit. The easiest method is:- Insert two of the claws into the gold arm facing inwards to the width of the tyre, then secure each in place with one button head screw using the allen key provided. The third claw locates in the yellow stem facing inwards at the required setting as before.

BULLDOG AUTOCLAMP SECURED IN APPROX 5-10 SECONDS

1. The auto Clamp is fitted by taking the gold arm twisting it into the angle shown in the picture.
2. Then push the arm into the wheel arch and slide around the wheel into place.
3. The next step is to take the yellow stem and slide it into the gold arm until all the three points of the clamp are in contact with the tyre.
4. Then press the lock in until it clicks. When the clamp is unlocked the key is not required to lock it again leaving both hands to secure the clamp in approx 5 - 10 seconds.



REMOVAL

IMPORTANT. To remove clamp, insert key, rotate 1/2 turn, pull on key, and/or press down on gold arm until lock pops out.

Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.

Tel: 01952 728171 Fax: 01952 728117

Email sales@bulldogsecure.com www.bulldogsecure.com

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray lock mechanism with WD40 (or equivalent) minimum every four months.